




Industrial electronic systems
Bulgaria, Pleven 5800, 27 Osogovo str.
tel./fax: +359/64/870172, tel.: +359/64/870170
e-mail: office@vema-bg.com http://vema-bg.com

Temperature Controller TC 103 RAMP

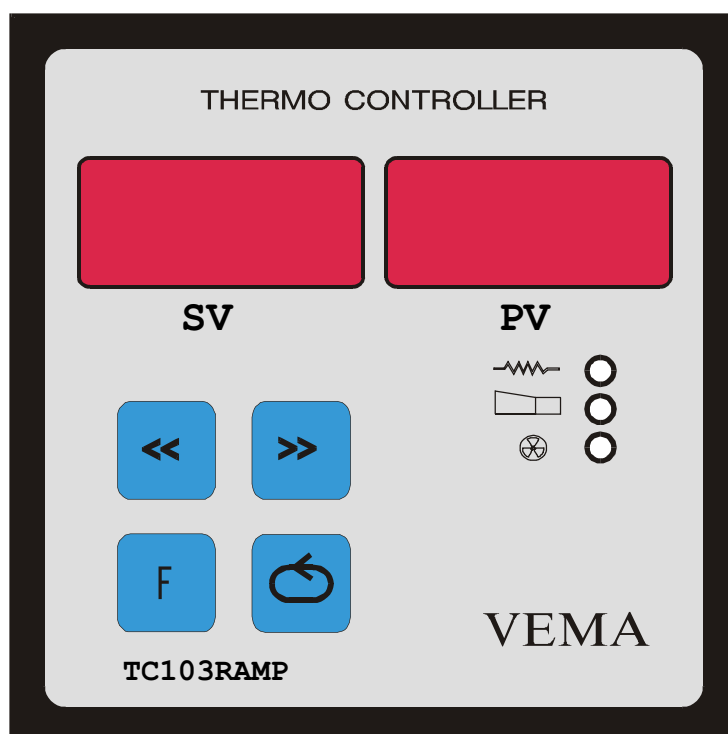

Thermocontroller with **auto-tuning** of the PID-parameters to the controlled object and option for gradually reaching the set value (**ramp function**) using dynamical bias feature

USER'S MANUAL

I. INTRODUCTION

The microprocessor Temperature Controllers TC103RAMP-J/K/R/P offer optimal comfort of service and visualization of information.

The Temperature Controllers TC103RAMP-J(K/R) are assigned to work with thermocouples of type J, K or R, the TC103RAMP-P Temperature Controllers - with thermistors of type Pt100.

The output signal is given either as a relay or a direct current output.

The Controller can be used as a 2-position on-off regulator if the alarm relay is used to control the heater (cooler) instead of the control output.

The auto-tuning algorithm explores the parameters of the object to be controlled and sets the corresponding PID-constants of the Controller.

The Controller is supplied with an alarm relay output for preventing the temperature from great detours in the technological mode of the controlled object. The alarm relay output can work in 16 programmable modes, non-latch standby sequence included.

The desired temperature SV (Set Value) and the current temperature PV (Process Value) are constantly displayed.

The processes of heating, ramping and alarm are indicated by separate light diodes.

All parameters of the Controller can be set (changed) in Program Mode. In this case the mnemonics of the parameters are shown on the "SV" display and the current values of the parameters are shown on the "PV" display. Using the arrow buttons "<<" and ">>", the parameters' values can be changed by one unit or at a faster rate (when the button is held pressed for a longer time). The values of the parameters are automatically restricted within their possible limits.

II. TECHNICAL FEATURES

1. Range of regulation of temperature:	-99°C to 450 °C
2. Accuracy:	0.2 to 1 %
3. Ranges of parameters:	
- gain factor Xp:	0 to 100 %
- differential constant time Td:	0 to 250 sec.
- integral constant time Ti:	0 to 999 sec.
- length of cycle Tc	0 to 200 sec.
- alarm limits tAL:	-99°C to 450 °C
4. Indication:	seven-segment, height 14.2 mm

5. Control output:
- relay type: max. 250 V/2A, $\cos\Phi=1$
 - open collector type: 0/18V up to 30 mA
 - direct current: up to 20 mA
6. Supply voltage: 187 to 242 V at 48/62 Hz
7. Size: 96x96x85 mm
8. Ambient temperature: 0 to 50 °C

III. MNEMONICS OF THE PARAMETERS

1. SSP - set temperature (SV) in static(=no ramp) mode
2. rSP - ramp endpoint
3. r n - ramp time (in minutes) for the SV to gradually change from SSP to rSP
4. r S - ramp time (in seconds) for the SV to gradually change from SSP to rSP
5. r t - pause time before ramp start
6. r i - start value of the bias (in percent)
7. r d - acceleration rate of the bias (in percent for thousand seconds)
8. r - - ramp toggle. Changing the value of this parameter will start/stop ramping
9. r P - Xp factor for PID in ramp
10. S P - Xp factor for PID in static mode
11. rtd - the differential constant for PID in ramp
12. Std - the differential constant for PID in static mode
13. rti - the integral constant for PID in ramp
14. Sti - the integral constant for PID in static mode
15. rtc - the length of cycle in ramp
16. Stc - the length of cycle in static time
17. ALL - lower alarm limit of temperature
18. ALU - upper alarm limit of temperature
19. ALn - number (type) of an alarm mode (0 to 15):

0 - no alarm output;

1 - the alarm zone is under ALL:


2 - the alarm zone is above ALU:

3 - under ALL and above ALU:

4 to 7 - same as types 0 to 3, however the alarm output is inverted;

8 to 15 - same as types 0 to 7 but with a non-latch standby sequence. The

standby sequence is initiated upon startup of the Controller or end of Program Mode, and finished at the first occurrence of a non-alarm zone. During the standby sequence the SV display is blinking and the alarm output works as if in a non-alarm zone, i.e. the alarm output is off for types 8-11 and on for types 12-15.

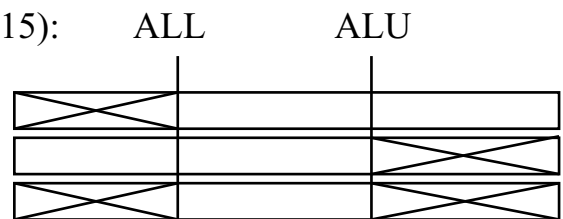

IV. PROGRAM, MONITOR AND AUTO-TUNING MODES

Program Mode is switched on by pressing the "F" button. The display reads "**SSP xxx**", where xxx is the Set Value of the temperature. Now the first parameter (Set Value) can be changed using the arrow buttons "<<" and ">>". To save the new value and go back to Monitor Mode, press (←). To get to any parameter in Program Mode, keep pressing (or hold pressed) the "F" button until the mnemonics of the parameter shows up on the "SV" display.

Simultaneously pressing of both arrow buttons while in Monitor Mode will invoke the Auto-tuning Mode (s. CHARACTERISTICS) of the Controller. The display reads "**OPt xxx**", where xxx is the current temperature and the "**OPt**" is blinking. In any other mode, pressing both arrows will put the Controller back into Monitor Mode.

In Monitor Mode, the display reads the desired temperature (Set Value) and the current temperature (Process Value). Blinking of "SV" indicator means that the standby sequence (s. CHARACTERISTICS) is on, i.e. the Controller has not reached a non-alarm zone yet. In Monitor Mode are displayed all possible errors:

- "**EPr Err**", if the EEPROM chip is damaged, or is just replaced;
- "**xxx oFF**", if the thermocouple is loose.

V. SPECIFIC CHARACTERISTICS

5.1. Deviations from the Set Value.

The normal deviation of the current temperature from the set temperature is about 1°C or less. Greater deviations of 2-3 °C are sign of incorrect PID-parameters, unacceptable outer influences, intense electric noises, incorrect placement of the temperature sensors or damages.

5.2. Alarm Standby Sequence.

The alarm standby sequence is initiated on startup of the Controller or on going back to the Monitor Mode after a parameter change, only when the alarm mode is greater than 7 (**Aln**>7). During the alarm standby sequence, the "SV" display is blinking and the alarm output is working as if in a non-alarm zone, i.e. OFF for alarm modes 8 to 11 and ON for alarm modes 12 to 15. On the first occurrence of a non-alarm zone, the alarm standby sequence finishes up. Use this feature when alarm situations before the Controller has stabilized the temperature must be ignored, e. g. when wanting to prevent the extruder from running cold.

5.3. Auto-tuning.

The auto-tuning algorithm enables the Controller to adjust its PID- parameters to the characteristics of the controlled object for a more precise temperature regulation. The only parameter needed is SSP. The auto-tuning can be started in Monitor Mode by pressing both arrow buttons "<<" and ">>". The "SV" display reads a blinking "**OPt**", indicating that the (self-)optimization routine is still going on. Pressing the both arrow buttons once more will cancel the auto-tuning. It is recommended to give a tolerance of at least 25 degrees Celsius between the starting and the set temperature before starting the auto-tuning algorithm, since the self-optimization uses the step response method.

If the gain factor after auto-tuning is greater than 80%, it will mean that the heater (cooler) is not powerful enough for this object. If this parameter is less than 10%, then the heater (cooler) has an exceeding power for the controlled object.

VI. RECOMMENDATIONS

VI.i. Static mode (no ramping output, no bias).

A better control of the temperature is achieved by a smaller cycle times. However, this leads to a more frequent commutation of the relay and to a faster wear-out. A compromised value in this respect is $T_c=10$ sec.

The differential time constant influences the forecasting action of the Controller, so to a great extend the initial oscillations of the temperature depend on this constant. When no auto-tuning is used, the recommended value for T_d to start with is 40 sec.

The fast and smooth reaching of the set temperature depends greatly on the integral time constant. The temperature controllers TC103RAMP are fuzzy-optimized with respect to the PID integral action, so that values $T_i=200$ give a sufficient result for a huge class of objects.

The gain factor depends entirely on the location of the set temperature on the characteristic of the heater (cooler), so it is not possible to give any recommended values. However, if the heater (cooler) are optimally constructed for the controlled object, $X_p=25\%$ will suffice.

All of these recommendations are only given for basic orientation, so the best recommendation is to run the auto-tuning algorithm and after that dynamically correct the evaluated parameters, if need may be.


The alarm mode must be selected according to the technological assignment of the controlled object. For extruder machines, it is very hazardous to run the main motor before the temperatures have not been stabilized and the material along the shaft has not melted. In this case, alarm modes ALn 9 or 11 must be selected, so the alarm standby sequence can be used. If it is not acceptable for the temperature to rise above a certain limit, then ALU and alarm modes 10 or 11 are used. Alarm modes 12 and higher are used when the alarm output must work inversely.

VI.ii. Ramping mode.

The time $\langle r n : r S \rangle$ for gradually reaching of the set temperature rSP should be a lot greater than the time for which the Controller would reach the set value, if no ramp function was used. The ramp function can be switched on (off) by changing the value of parameter $r--$.

The $r t$ time specifies the pause after the heater is on to allow for a sensor reaction. During this time the Controller output is set to the initial bias $r i$ without any PID feedback. The actual ramping starts after this pause, and is indicated by the ramping output (ON).

When the heater load in ramping mode is a lot greater than the load in static mode, then the recommendation is to cancel PID feedback by setting $r P=0$ and experiment with proper values for $r i$ and $r d$, and then gradually increase the PID feedback gain by the $r P$ parameter.

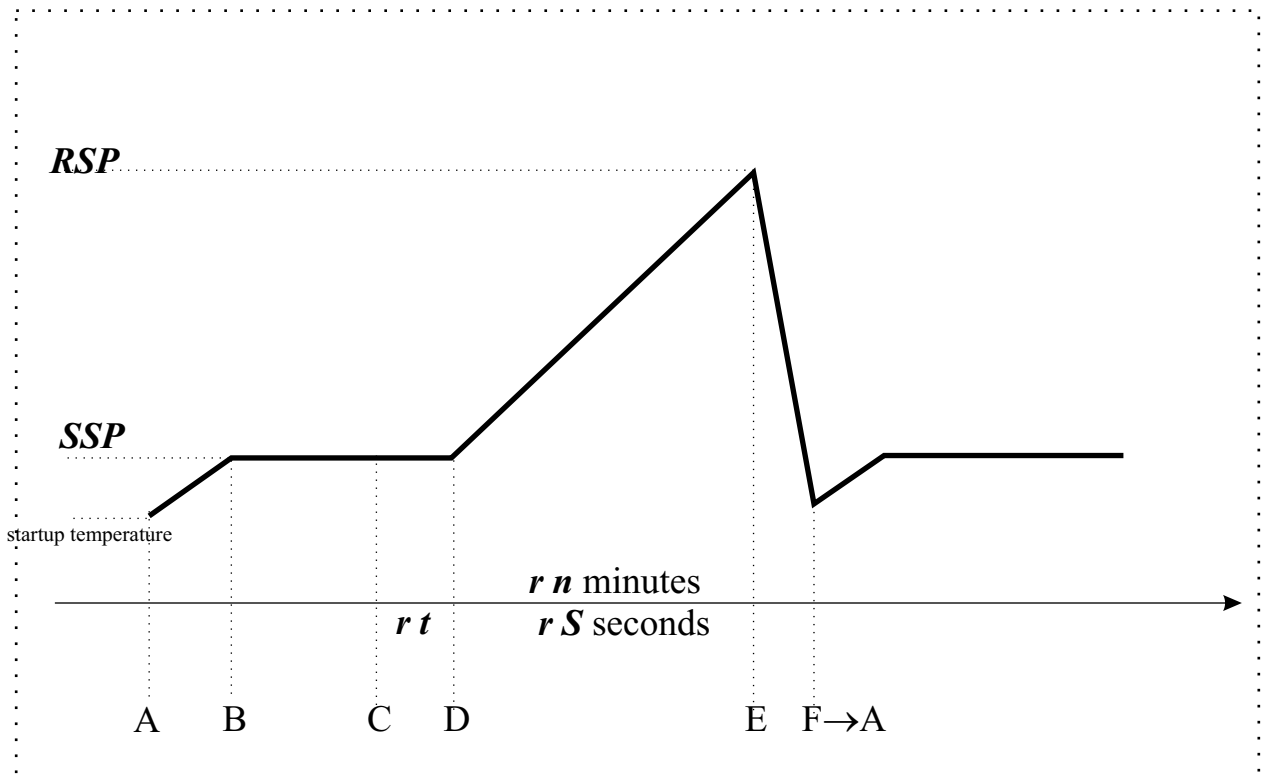

A - initial startup of the Controller. The set temperature **SSP** is gradually reached by the PID feedback unit in static mode.

B - the set temperature **SSP** is reached and maintained in static mode.

C - the user starts ramping by changing the value of **r-** parameter. Next **rt** seconds the Controller outputs the initial bias value **ri** without any acceleration in it. No PID feedback.

D - the actual ramping begins, the ramping output is set to ON. The set temperature is linearly changed from **SSP** to **rSP** for **rn** minutes and **rS** seconds. The value of the bias is also accelerated from its initial value **ri** by **rd** percents for 1000 seconds.

E - ramping endpoint is reached, ramping output is OFF. The Controller is back to static mode while cooling off.

F - end of cooling. A new cycle of the Controller can be initiated as in A.

Note. The ramping mode(C-D-E) can be interrupted by the user by changing the value of **r-** parameter. The Controller will continue in static mode with **SSP** set temperature.

VII. MECHANICAL CONNECTION AND MOUNTING

The Controller is assigned for mounting on facet panels of electrical units. The slot for mounting should have a square shape of 92x92 mm. To secure the Controller on the panel, use the attaching screws.

The connector pin attachment of the Controller is pictured on its rear panel. The connecting wires must be isolated and of minimal diameter of 0.5 mm. Direct control of powerful heating/cooling elements should be avoided. Use thyristor elements as shown on the figure below is recommended, since they are not exposed to frequent commutations and fast wear-out.

